

8W-47 AUDIO SYSTEM

Component	Page	Component	Page
Fuse 3	8W-47-5	Left Rear Speaker	8W-47-3, 5
Fuse 14	8W-47-2	Power Distribution Center	8W-47-2
Fuse 20	8W-47-2	Radio	8W-47-2, 3, 4, 5
Fuse Block	8W-47-2, 5	Right Front Speaker	8W-47-3, 4
G204	8W-47-2	Right Rear Speaker	8W-47-3, 5
G303	8W-47-4, 5	Subwoofer	8W-47-4, 5
Instrument Cluster	8W-47-2		
Left Front Speaker	8W-47-3, 4		









